


OPERATION MANUAL

Symbol Key	Symbol Key	Functions	Annotations
		lock	Press the key to close the door, the light flash 3 times.
		Unlock	Press the key to open the door, the light flash 1 times.
		Car searching/ open trunk	Press the key to once to search the car, the light flash 10 times Press the key for 2 seconds to open the trunk, the light flash 2 times.

FUNCTIONS


- Remote Control Keyless Entry.
- Remote Trunk Release.
- Car Finder, Parking Flasher.
- Door Lock Delay Time.(0.8/4SEC)
- Compatible with All Central Door Locking System.
- Easy To Install.

WIRING AND INSTALLATION DIAGRAM OF THE MAINFRAME

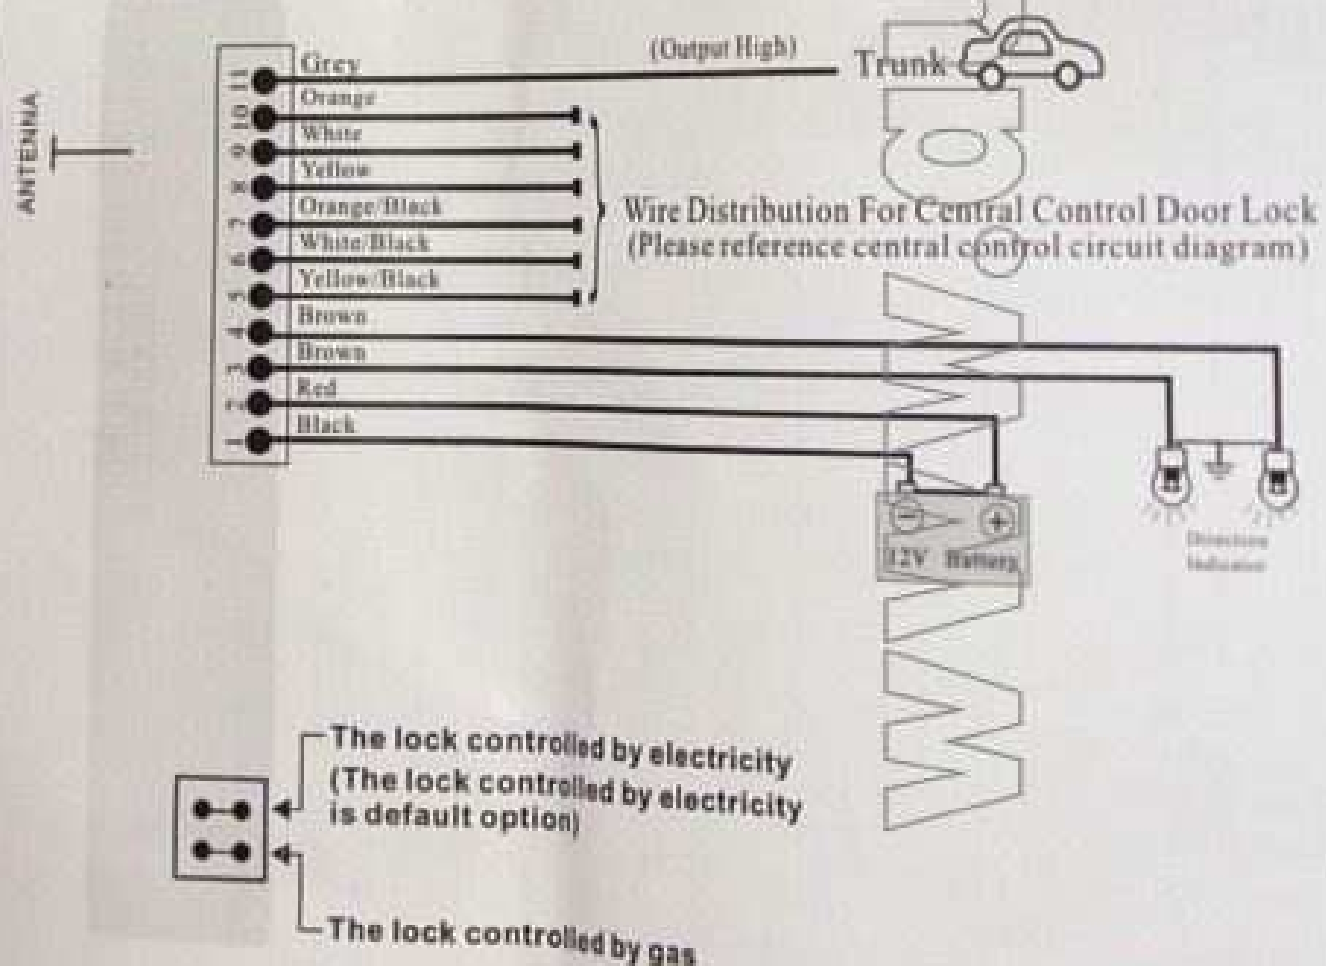


CENTRAL CONTROL CIRCUIT DIAGRAM


1. Positive touch-off

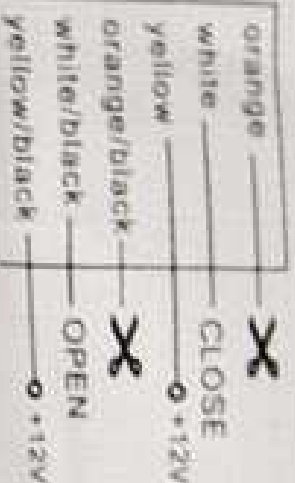


2. Positive and negative touch-off

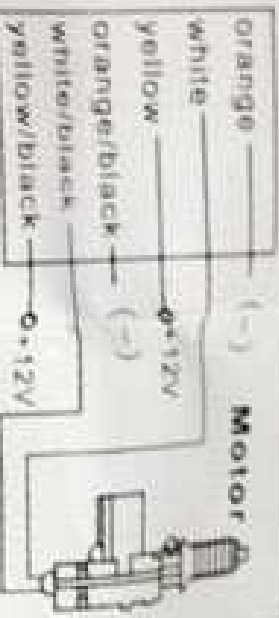


3. Negative touch-off

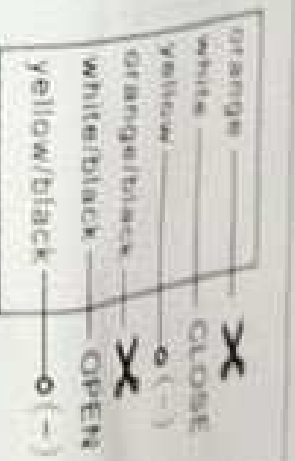

www.auto100.ro

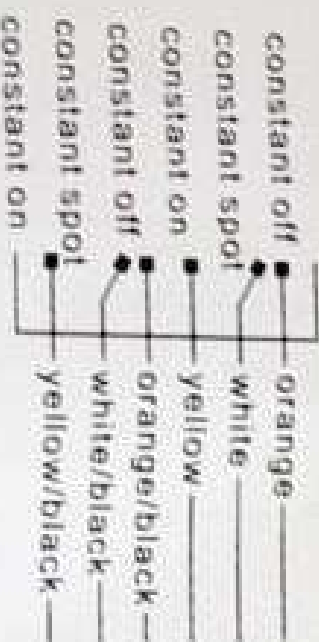

Interior circuit diagram of the relay

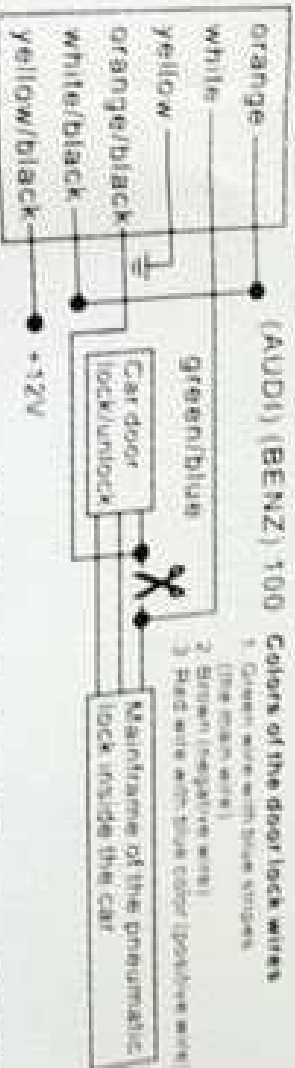

Explanation: when assembling it on this kind of cars, you must select a central-control period of 4 seconds to convert the action time of the pneumatic door lock.