

## Operation Instruction:

### 1. lock

Press "■" on the remote controller once with the direction light flash once, and then the central control door lock will be locked. 30 seconds negative(-) output for window roll-up. The LED will automatically flash.

### 2. unlock

Press "■" on the remote controller once with the direction light flash twice, and then the central control door lock will be unlocked.

### 3. trunk release

Long press ■ for 2.5 seconds, the direction light will flash three times and trunk release simultaneously.

### 4. car finding

In arming, press "■" once, direction light flash three times, for finding the car.

5. pneumatic lock/electric lock, positive/negative trunk can be selected just like diagram display

## Circuit Diagram of Remote Central Control Lock System

