


Power window user's manual (PW04)


1. When ACC OFF, close the door, press the arming button of the remote control, the window will be closed automatically one by one: first: left front window → right front window → left behind window → right behind window. (for 4 doors first: left front window → right front window. (for 2 doors)
Note: The activating time of each window lasts less than 8 seconds. and it would rolling up all the window in 30 seconds
2. Press the disarming button could not stop the power window when it is activated the power would stop automatically after all windows are closed well. Also when the power window is activated, turn ACC ON, it could not stop the power window.
3. When ACC ON, press the arming button, there is no response of the power window. You have to close or open the window by manual switch.
4. Safe mode: When the power window is rolling up, if there is any resistance in the window (such the child puts his head in the window), this window will be stopped immediately, but other windows will keep rolling up continuously. The window with resistance will keep rolling up till other windows closed safely (auto re-rolling up)
5. You can choose the trigger signal POSITIVE (+) or NEGATIVE (-) from the wire harness of yellow and red/black (+) and purple and pink wire (-) connect with brown wire, it can be equipped in the + power window trigger car alarm. If connect with brown/white, it can be equipped in the - power window trigger car alarm.

Connection way for central lock +/- trigger, see as below:



The connection of Positive trigger

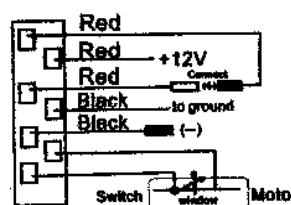

The connection of Positive trigger

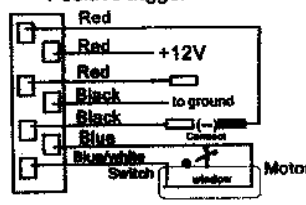


If installed a additional relay for 4 windows, the install see as below

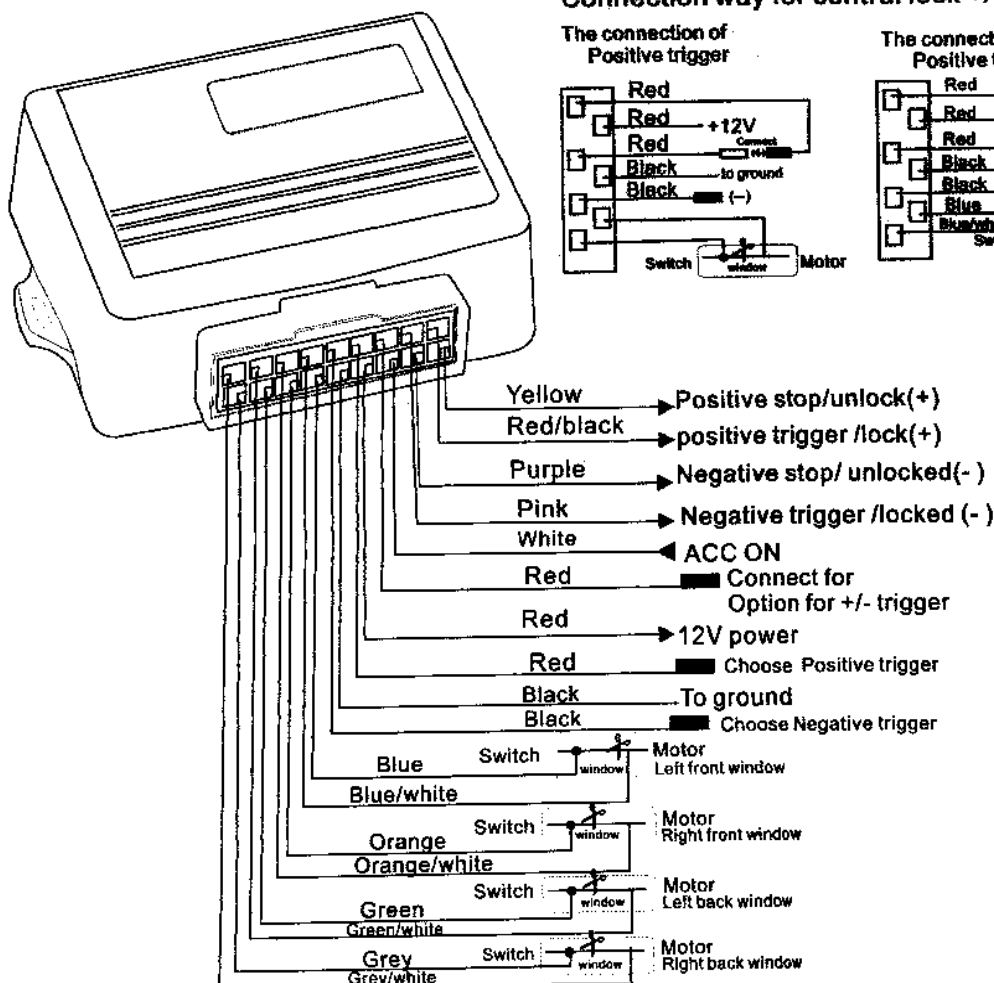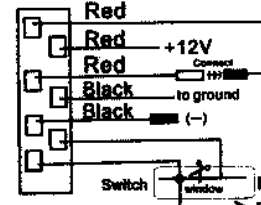

If the central lock is + trigger, it need to connect to positive stop/unlock (+) and positive trigger/lock(+). If the central lock is - trigger, it need to connect to negative stop/unlock(-) and negative trigger/locked (-).

Central door lock + trigger installs

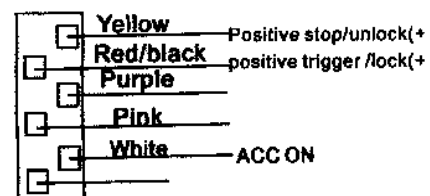

Central door lock - trigger installs

